PROGRAMMER DESCRIPTION SHEET

GB | IE

Symbol description

Cooking time	Cooking end time	Time of day
"Browning" special function	"Heat Maintenance" special function	°C Scale for heat

- *The flashing indicators ▼▼▼, located in the lower side of the display, show the functions that can be selected or modified at the time.*

OVEN FAST START

NOTE: TO CANCEL ANY SELECTION, SIMPLY TURN KNOB 1 TO "0".
When the oven is connected to the power supply for the first time, or re-connected after a power failure, *the display will show "5tOP".*

To start the oven:
1. Turn **knob 1** to **"0"**.
2. Press **button 2**. *The display shows "--:--".*
3. Select the function.

SELECTING A FUNCTION

1. Turn **knob 1** to the chosen function: *the preset temperature or grill level will flash on the display.*

If the displayed value is correct, press **button 2** to confirm, or with the exception of function P1, **wait 10 seconds to have the value accepted automatically.**

To change temperature or grill level:
1. Turn **knob 3**: *the preset temperature or grill level will flash on the display.*
2. Press **button 2** to **confirm** or **wait 10 seconds to have the value accepted automatically.**

The oven starts: *the indicators ▲▲▲▲▲ will light up in sequence on the display showing on the scale °C----- the temperature increase.*

N.B.:
10 seconds after the function has been selected, the oven will start: this does not prevent selecting or changing the temperature or grill level.

Once the food is cooked:
- Switch off the oven by **turning knob 1** back to **"0"**.

General remarks:
- If the position of **knob 1** is changed while cooking is in progress, all selected options are cancelled.
- Keeping **button 2** down for 5 seconds deactivates the audio signal associated with the manipulation of knobs and buttons. The acoustic signal is enabled again by pressing **button 2** for 5 seconds.
- For safety reasons, after 5 hours of continuous operation the oven will switch off automatically (except for the oven light and MLTF functions).

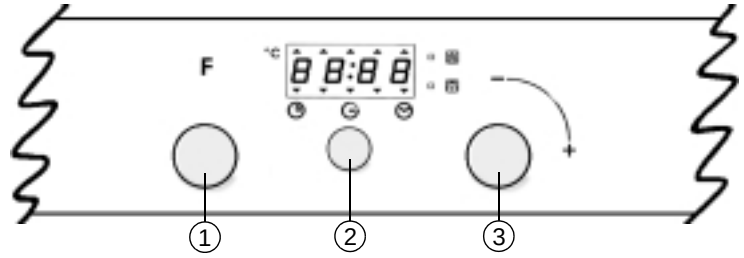

- *The indicators ▲▲▲▲▲ located on the upper portion of the display, corresponding to the scale °C -----, show the gradual increase of the temperature. When all the indicators are on, the selected temperature is close to being reached.*
- *The indicators located on the right side of the display next to the symbols , show the selection of the 2 special functions.*

USING THE PROGRAMMER

To select the time of day:
1. Turn **knob 1** to **"0"**.
2. Press **button 2** twice: *"12:00" or the time of day will flash on the display ▼. Will appear next to the symbol .*
3. Turn **knob 3** to set time of day: *the display will show the time of day (flashing).*
4. Press **button 2** or wait 5 seconds to have the value accepted automatically.

To modify the time of day:
Turn **knob 1** to **"0"** and repeat the steps above.

SELECTING A COOKING TIME

Select the cooking time (available with any function) to start the oven on for a specified period of time. At the end of the specified time the oven will switch off automatically.
(The maximum programmed cooking time is 3 hours and 59 minutes for all functions, with the exception of the MLTF function (Heat Maintenance) for which it is 9 hours and 59 minutes).

After selecting a function and a temperature or grill level:
1. Press **button 2** until *the display shows a flashing ▼ next to the symbol and "0:00" appears.*
2. Turn **knob 3** clockwise: *the display will show the selected time (flashing).*
   The symbol "-" in front of the selected value indicates that the time will count down to "0".
3. Wait 30 seconds to have the value automatically accepted. The oven will start.
   To display the previously selected temperature, turn the **knob 3** by **one click.**

To change the preset temperature or grill level:
1. Turn **knob 3** and confirm by pressing **button 2**, or wait 10 seconds to have the value accepted automatically.

Once the food is cooked:
An audio signal begins, the display shows "End" and the oven will switch off automatically. The oven light will remain on for 10 minutes.
1. Press **button 2** to stop the audio signal and switch off the oven light.
2. Turn **knob 1** back to **"0".**

SELECTING A TIME BY WHICH THE COOKING MUST BE COMPLETED

(Using this function it is possible to **program** the oven to switch on at a specified time and have it **switched off** automatically at another defined time.)

For example: if the time is 9:00 am, it is possible to switch on the oven for 45 minutes in such a way that it will switch off at 12:30 pm; the maximum programmed time is 23 hours and 59 minutes).

After selecting a function and a temperature or a grill level:

1. Press **button 2** until *the display shows a flashing ▼ next to the symbol ◷ and "0:00" appears.*
2. Select the cooking time by turning **knob 3**: *the display will show the selected time (flashing) (e.g.: 45 minutes).*
3. Press **button 2** to confirm the selection: *the indicator ▼ will flash next to the symbol ◷ and the display will show the time of the day (e.g.: 9:00 + 45 minutes = 9:45).*
4. Select the time at which the oven should switch off, turning **knob 3** (e.g.: 12:30).
5. Press **button 2** until the time of day is shown again (in the case of the example, 9:00), or wait 30 seconds to have the value automatically accepted.
6. The oven will switch on at a time that is the switch-off time minus cooking time: (in the case of the example: 11.45).

The display will show the indicators ▼▼▼ flashing next to the symbols ◷◷◷ together with the time of day.

- To **verify** the chosen temperature or grill level, turn **knob 3 by one click**.
- To verify or modify both the cooking time (45 minutes) and the switch-off time (12:30), press **button 2**.
- When the oven switches on: *the indicators ▼▼ are shown on the display next to symbols ◷◷ and the set cooking time is shown.*

Once the food is cooked:

An audio signal begins. The display shows "End", the oven switches off automatically and the oven light stays on for 10 minutes.

1. Press **button 2** to stop the audio signal and switch off the oven light.
2. Turn **knob 1** back to **"0"**.

SPECIAL FUNCTION

- **Browning**

This function allows the browning of food **while** it is cooked. It is possible to choose one of three levels of browning **1-2-3**.

- **Heat Maintenance function**

This function keeps the temperature in the oven at **60°C** at the end of the cooking cycle, for a maximum of 5 hours. To cancel the function, turn **knob 1** to **"0"**.

Programming the special functions

These functions are available **only** when programming cooking time or switch-off time.

The two functions can be programmed together or separately.

N.B.:
- The "Heat Maintenance" special function is available and can be used at the end of the following functions: Static, Pastry, Turbofan, Fan and Booster.
- The "Browning" special function is available and can be used after programming Static, Fan and Booster functions.

- When pressing **button 2**, if the indicators ▶ on the display **DO NOT** flash next to symbols , then for the function selected via **knob 1**, the special functions are **NOT** available.

After selecting a function, a temperature, a cooking time or the time at which the oven should switch off:

To select the "Browning" special function :

1. Press **button 2** until *the display shows the indicator ▶ flashing next to the symbol and "0" appears.*
2. Turn **knob 3** to select the degree of browning: **1, 2** or **3**.
3. Press **button 2 twice** or wait 30 seconds to have the value accepted automatically.

Once the food is cooked:

An audio signal begins, the display shows the message "End" and the oven switches off automatically. The oven light remains on for 10 minutes.

- Press **button 2** to stop the audio signal and switch off the light.
- Turn **knob 1** back to **"0"**.

After selecting a function, a temperature, a cooking time or the time at which the oven should switch off:

To select the "Heat Maintenance" special function

1. Press **button 2** until *the display shows the indicator ▶ flashing next to the symbol and the message "---C" appears.*
2. Turn **knob 3** to select "60°C".
3. Press **button 2** or wait 30 seconds to have the value accepted automatically.

At the end:

An audio signal begins and the displays shows "60C".

- *Press **button 2** to stop the audio signal and switch the light off.*

The oven will maintain a temperature of 60°C until **knob 1** is turned to **"0"**.

SELECTING THE TIMER

The oven provides a timer that can be used to control the duration of cooking processes taking place on appliances other than the oven (e.g.: microwave oven, cooktop, toaster).
(The maximum programmed time is 3 hours and 59 minutes, independent of what the oven is used for in the meantime.)

To set the time:

1. Keep **knob 1** on **"0"** or . *The display shows the time of day.*
2. Press **button 2** until *the display shows the indicator ▼ flashing next to the symbol ◷.*
3. Turn **knob 3** clockwise. *The selected time will flash on the display. The symbol "-" on the left of the selected time indicates that the time will be counted down to "0".*
4. Press **button 2** or wait 30 second to have the value automatically accepted.

When the set time has elapsed:

- *An audio signal begins and the display shows "End".*

1. Press **button 2**: *The audio signal stops. The display shows the time of day.*